



# FARFABBRI S.R.L.

MANUFACTURERS OF AMUSEMENT RIDES

45032 BERGANTINO (Rovigo) - Italy  
Via Giovecca, 74 - Tel. 0425/87420 - 37142 - Fax 0425/805113  
A/710794 - C.O.M.A.A. P.O. N. 30591 - TRIB. P.O. REG. SOC. N. 4023  
Cod. Fisc. e P. IVA 00724000234

## SERVICE BULLETIN

RIDE: Ranger (aka: Phoenix, Kamikaze, Hi-Flyer)  
SUBJECT: Hydraulic Oil Level


DATE: January 28, 1993  
BULLETIN #: FRO31

\*\*\*\*\*

The hydraulic pump on the Ranger is supplied by gravity flow. Therefore, the oil level should always be kept at or above the minimum level indicated on the drawing below. **Note:** This level is measured when all trailer levelling jacks are retracted and the tower is down. A sight glass can be installed at this level.

Affix the enclosed label to the tower above the handle that operates the tower cylinder.

For further information, contact Exsaco Corporation, One North Santa Fe St., P.O. Box 328, Alvarado, Texas 76009, at 800-545-0667.

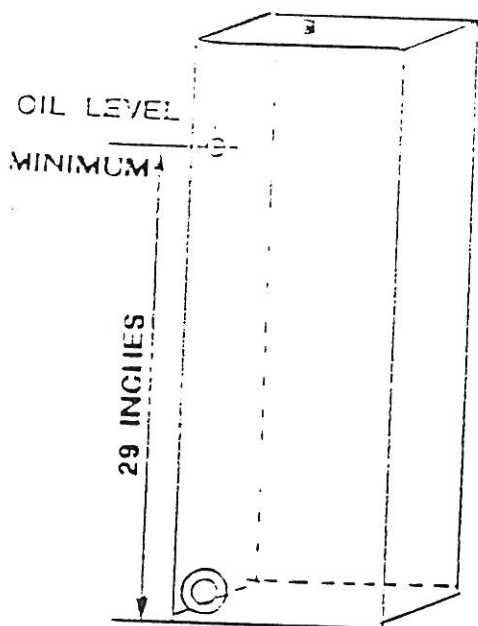

Check hydraulic oil level BEFORE starting pump. Refer to manual for further details.

FAR FABBRI S.R.L.  
Via Giovecca, 74 - Tel. 0425/87142-87420  
45032 BERGANTINO (RO)  
Cod. Fisc. e P. IVA 00724000234  
*[Handwritten signature]*