

SERVICE NOTICE

DATE: APRIL 14, 2015

RIDE: GRAVITRON, STARSHIP ALIEN ABDUCTION

AND CENTRIFUGE

SUBJECT: TRAP DOOR MICROSWITCH

INSTALLATION

Due to the risk of employees being injured by standing in the trapdoor of the Gravitron/Starship/Alien/Centrifuge rides, it is required that the trapdoor be closed at all times. Some agencies require that the trapdoor be permanently closed by welding.

Some agencies require that the trapdoor be accessible as a second means of egress. If this is the case, attached is a system to interlock the trapdoor with the drive system so that when the door is open the drive system is disabled and the operator cannot energize the main motor with the trapdoor open.


One system or the other is required to be performed.

!! IMPORTANT SERVICE BULLETIN !!


DANGER: DISCONNECT POWER BEFORE WORKING ON WIRING!!! ELECTROCUTION HAZARD IS POSSIBLE!!!

1.REMOVE WHITE WITH RED STRIPE FROM COMMUTATOR.


2. ATTACH TO ONE WIRE FROM MICROSWITCH.





- 3. ATTACH OTHER WIRE FROM MICROSWITCH TO THE RING THAT THE WHITE WITH RED STRIPE WAS CONNECTED TO.
- 4. WIRES ATTACH TO THE NORMALLY OPEN CONTACTS IN MICROSWITCH.

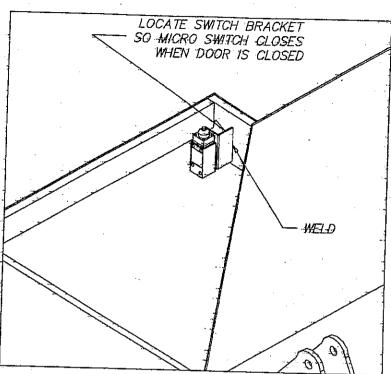

SWITCH INSTALLATION SHOWN WITH DOOR OPEN

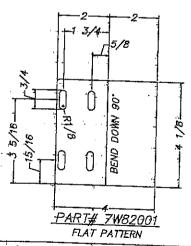

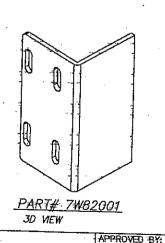



PART #ESLODO1 MICRO SWITCH

WISDOM RIDES

EQUIPMENT:

Merino, CO 80741

TRAP DOOR MICROSWITCH INSTALLATION

GRAVITRON/ STARSHP/OTHERS

DRAWN BY: MLH

SCALE NTS 14APR15 DATE: DRAWING NUMBER: 7W03001

< L:\GRAV-DWC\7W05001.DWC 11:02: 1

2015

*

4P.R